


# Icon ICS1M

**Art. no.** ICS1M  
**GTIN** 7393069021592

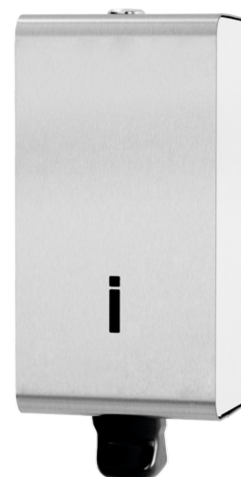


**Overall dimension in mm** 120 x 100 x 250  
**Material** AISI 304  
**Material thickness in mm** 1,25/1,00  
**Installation height in mm** 1350mm til topp  
**Gross weight in kg** 1.70  
**Weight, pallet** 305.50  
**Pcs per pallet** 165  
**Design** OddThorsen

## Description

Icon Soap dispenser in stainless steel. The dispenser is supplied with a 1 litre plastic container for refill. The dispenser dispenses soap with every push. There is a refill window at the front of the dispenser so it is easy to see if the container needs to be refilled. Grinded finish.

## Installation

Fix the product to the wall by using the four screws supplied with the product. Standard procedure is to use the back plate as drill template.

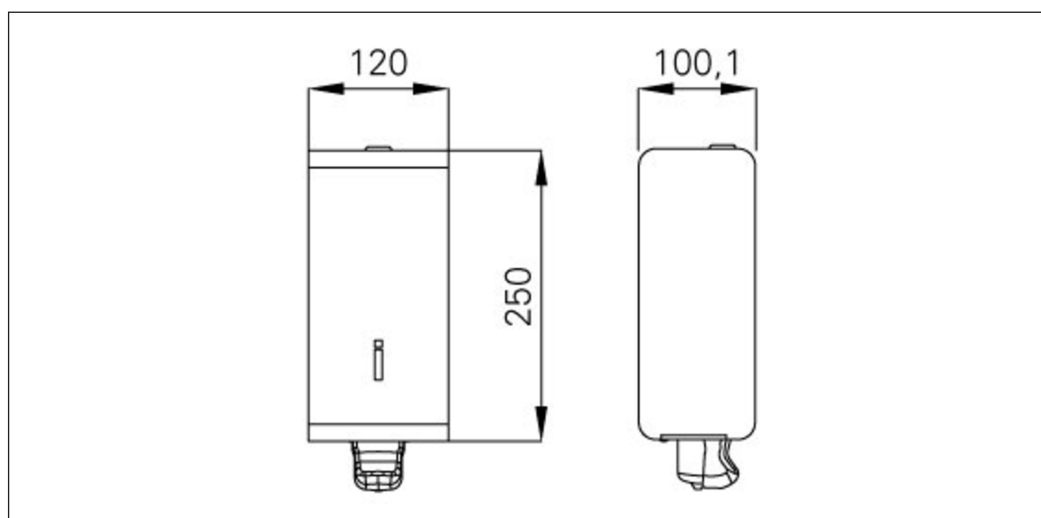

# Installation ICS1M

## ASSEMBLY

Included in the box:

- \* Soap dispenser with pre-mounted pump
- \* Assembly equipment
- \* Soap container with lid and pump spout
- \* Key

Fix the product to the wall by using the four screws supplied with the product. Standard procedure is to use the back plate as drill template.

When filling soap the first time, the small tab on the lid on top of the soap container needs to be pierced / cut away to avoid vacuum in the container as it is emptied. Refill soap by opening the cover on the dispenser and remove the small plastic lid on the top of the soap container. Fill soap and put the lid back on before closing the cover.

## SPARE PARTS

Lock for dispenser: 91110  
 Assembly equipment: YMX02  
 Soap container and lid: 80012/80012-1  
 Pump spout: 80022  
 Pump holder: 80014  
 Pump: 80009

## MAINTENANCE OF FUNCTIONALITY:

Keep soap dispenser clean inside and take out the soap container and wash the spout regularly - especially if it is spilled soap during refilling. Make sure it is not used soap with content that could damage the dispenser. (see maintenance of stainless steel)

## MAINTENANCE:

### INTRA PRODUCTS OF STAINLESS STEEL

Several of our products are delivered entirely or partly covered with plastic wrapping. This wrapping protects the products during transport. This wrapping must be removed before using the products.

In order for your Intra stainless steel product AISI304 to retain its original quality and appearance we recommend regular cleaning. Use mild soap or cleaning products specifically designed for stainless steel and clean water. Then wipe the surface with a dry cloth. Never use detergents containing chlorine, iodine, fluoride or abrasives on stainless steel. Also avoid contact with acid solutions and other substances incompatible with stainless steel. Remember that food and skin care products may contain such substances, e.g. ketchup, juice, salt, certain cleansers, nail polish, etc. Promptly remove spills of such products.

Observe the following:

- \* Do not allow water or other liquid to dry in. This is to avoid staining the surface.
- \* Even though stainless steel can withstand harsh treatment, it can easily be scratched by sharp objects. For products with normal, polished (brushed) finish, this will be very visible when the product is new, but after a period of use, this will be negated as the steel loses its lustre. For products with satin and polished finishes, the scratches will always be visible. Never use scouring powder or steel wool on stainless steel. In addition to scratching the steel, wire wool will leave behind small particles that may develop into rust spots which, over time, may corrode the steel.
- \* Stainless steel must not come into contact with, or be in environments containing, chlorine solutions for long periods of time.
- \* Silver polish causes stains which cannot be removed.