

Wash basin ED2

Art. no. ED2 7055570014059





Overall dimension in mm 331 x 338 x 239

Depth in mm 106 Material **AISI 304** Material thickness in mm 1,25 Installation height in mm 850 Product load in N 1000 4.50 Gross weight in kg Weight, pallet 160.00 Pcs per pallet 30 Made in Norway


Description

Vandal resistant Hand Wash Basin in stainless steel 18/10, for wall mounting. Complete with closed shroud for concealed in- and outlet. Supplied with integrated waste and water trap.

Hand Wash Basin ED2 can be supplied with left or right hand taphole on request.

Installation

Fasten the top and bottom fixing bracket to the wall. Connect water trap to the outlet. Place the basin onto the top bracket and finally secure to the lower bracket.

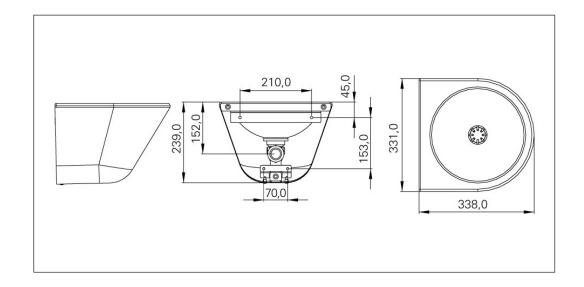



Installation ED2

ASSEMBLY:

Included in the box:

- * Washstand
- * Valve 1 1/4" bottom section
- * Gasket, Celleprene
- * Water trap 1 1/4" x 32 mm
- * Pipe 32 mm 150 in length
- * Set screw M6x25 A4 x 2
- * Suspension strip
- * Wall bracket
- * Assembly kit
- * Assembly instructions with template

Ensure that you have all the parts before assemblybegins.

(A mixer tap must also be mounted on the sinkbefore the sink is mounted on the wall)

Attach the template to the wall at the correct height for the sink and

use this to pre-drill the holes for the hanging strip andwall bracket.

Mount the suspension strip and wall bracket on the wall.

Assemble the parts of the outlet and connect the siphon to thewashstand. (The Celleprene gasket must be betweenthe valve and sink) (Mount the mixer tap onthe sink and water inlet). Hang the sink onthe suspension strip. Affix the sink to the wall with 2set screws in the wall bracket on the underside of the cover.







Maintenance ED2

SPARE PARTS:

Valve 1 1/4" bottom section: 79004

Gasket, Celleprene: 91093

Water trap 1 1/4" x 32 mm: 78088 Pipe 32 mm - 150 in length: 78090

Set screw M6x25 A4: 86160 Suspension strip: ZED2OPP Wall bracket: ZED2VF Assembly kit: YMX01

Assembly instructions with template: 76272

MAINTENANCE:

INTRA PRODUCTS OF STAINLESS STEEL

In order for your Intra stainless steel product AISI304

retain its original quality and appearance we recommend

regular cleaning. Use mild soap or

cleaning products specifically designed for stainless

and clean water. Then wipe the surface with a dry cloth.

Never use detergents containing chlorine, iodine, fluoride or abrasives on stainless steel.

Also avoid contact with acid solutions and other substances incompatible with stainless steel.

Remember that food and

skin care products may contain such substances, e.g. ketchup, juice, salt, certain cleansers,

nail polish, etc. Promptly remove spills of such products.

Observe the following:

* Do not allow water or other liquid to dry in. This is to

avoid staining the surface.

* Even though stainless steel can withstand harsh treatment, it can

easily be scratched by sharp objects. For products with

normal, polished (brushed) finish, this will be very visible when

the product is new, but after a period of use, this will be negated as the steel loses its lustre. For products with satin and polished finishes, the scratches will always be

visible. Never use scouring powder or steel wool on stainless

steel. In addition to scratching the steel, wire wool will leave behind small particles that may develop into

rust spots which, over time, may corrode the steel.

- * Stainless steel must not come into contact with, or be in environments containing, chlorine solutions for long periods of time.
- * Silver polish causes stains which cannot be removed.