


Urinal acc. Spare parts

Art. no. EDU-SERV
GTIN 7055570014790



Description

Sparepart kit för flush free urinal URB-FF and EDU-1WF.

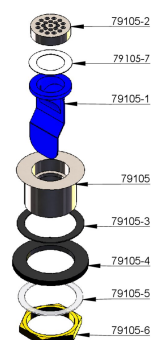

Installation Spare parts

Changing of silicone membrane:

The silicone membrane can be changed by using a special key that is provided. (Life expectancy to the membrane is about 1½ year, depending on the user intervals).

Change the silicone membrane and the top seal.

Before installation make sure that the membrane sides is not stuck together by gently blowing or adding some water into the membrane.

Lubricate the threads of the seal with a lubricant that contains molybdenum disulfide, which can be

purchased from your supplier. The silicone membrane can handle temperatures between -55 till + 210°C

NB! Never use a cleaning agent that contains chlorine, iodine or fluorine when maintenance is performed. Avoid emptying any fatty or oily substances in the urinal. Never use sodium hydroxide when cleaning the pipes and drains.